

BEAUTY  FIRES™

Signature Burner Manual

www.beautyfires.com

Operating Manual

Thank you for purchasing this BEAUTY FIRES Burner. BEAUTY FIRES is very safety conscious, we have taken every care in designing, manufacturing and assembling your BEAUTY FIRES Burner to ensure it operates effectively, efficiently and safely. In return we ask that you exercise care when using this product and follow the instructions below. Before using your BEAUTY FIRES burner, please read all the information contained in this operation manual carefully. Beauty Fires cannot be held responsible for any damage or injury caused if these instructions are not followed.

IMPORTANT SAFEGUARDS

When using this fireplace, basic precautions should always be followed, including but not limited to the following. **Read all instructions and warnings before using this fireplace.**

WARNING


- DO NOT OVERFILL THE BURNER'S INTENDED CAPACITY.
- USE ONLY THE FUEL FOR WHICH THE SIGNATURE BURNER IS INTENDED.
- DO NOT TOUCH THE EXTERIOR OF THE SIGNATURE BURNER DURING OR AFTER BURNING.
- PARTS OF THIS SIGNATURE BURNER CAN REACH HIGH TEMPERATURES.
- DO NOT HAVE COMBUSTIBLE OBJECTS IN CLOSE PROXIMITY TO THE BURNER.
- NEVER POSITION THE BURNER WITHIN RANGE OF COMBUSTIBLE ITEMS THAT CAN BE MOVED/BUMPED BY ACCIDENT, OR BLOWN BY THE WIND. E.G. CURTAINS, BLANKETS, PAPERS ETC...
- ONLY USE THE SIGNATURE BURNER IN AREAS WITH GOOD VENTILATION.
- DO NOT COVER THE SIGNATURE BURNER VENT WITH ANY DECORATIVE ITEMS WHETHER THEY ARE COMBUSTIBLE OR NON COMBUSTIBLE , INCLUDING BUT NOT LIMITED TO ARTIFICIAL LOGS, STONES, PEBBLES, GLASS BEADS, ETC...

CAUTION

- Make sure you have read and understood this manual before using this product.
- Never overfill or spill fuel when refilling.
- If fuel is spilled during filling, wipe with a dry cloth and allow the rest to evaporate before introducing a flame to the burner.
- If the burner is accidentally overfilled, follow the steps given in the next pages.
- To refill, wait until the burner is at the room temperature after the flame has been turned off. NOTE the flame can linger in the chamber for a while after the Sliding Lid has been closed. NOTE: the flame may not be visible to the naked eye.
- Never refill over or near an open flame.
- Use the supplied funnel or pump to refill.
- Remove all plastic & packaging before using the burner.

Trouble shooting and operating tips:

- The hooks on the back of the *Sliding Lid Handle* can be used to carry the *Burner* by hooking it around the slotted openings in the *Vent Plate* as shown in the image below.
- The **first fill** will take longer as the material inside the *Fuel Tank* will absorb the fuel. Subsequent filling should be quicker. Take care to not fill the burner at a faster rate than what the material inside can absorb the fuel.
- If the fire **does not extinguish** the first time by closing the *Sliding Lid* follow these steps and repeat if necessary.
 - Check that the surface below the sliding plate is clean and free from obstruction.
 - Use both handles and place the handle tips in the corresponding holes in the sliding plate.
 - Apply strong downward force and in one quick motion move the sliding plate towards the closed position. If the flame is still visible repeat this step as a double motion still applying strong downward force in quick succession.
- **Never blow on the flame** whilst the *Sliding Lid* is in an open position.
- If your *Burner does not ignite* after it has been closed overnight pour a small amount of fuel into the *Burner Vent* (as you would normally to fill the burner) and introduce the flame. This should then ignite the stagnant fuel inside the *Fuel Tank*.
- **VERY IMPORTANT: Take special care when adding fuel to the Slimline Burner, always close the *Sliding Lid* for a few minutes before adding fuel to make sure there is no lingering flame in the *Burner Vent*.**
- If after some time you find the *Sliding Lid* has **become 'sticky'** when attempting to move it then remove the *Sliding Lid* from its housing and rub the underside using the green side of a Scotch Bright scouring pad. Take care to only scrub in the direction of the brushing lines of the stainless steel.
- Make sure you keep your burner clean especially the surface that the *Sliding Lid* slides on and ensure that any excess fuel on the surface of the burner is wiped off before use.

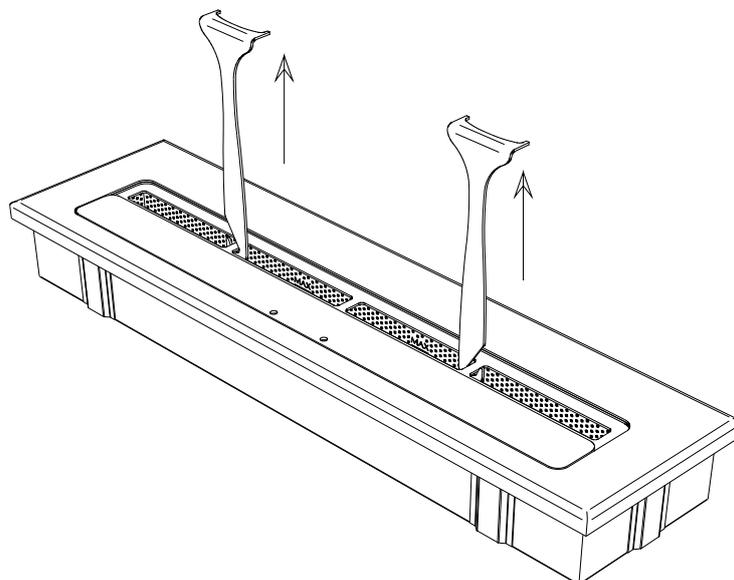

CONTENT OF PACKAGING:

- Burner Assembly - qty 1
- Safety Tray - qty 1
- Top Plate Sliding Lid - qty 1
- Sliding Lid Handle - qty 2 (Single Burner only has one)
- Electronic Fuel Pump - qty 1
- Long Arm Fire Lighter - qty 1 (South Africa Only)

MAKE SURE THE FIREPLACE HAS COOLED OFF COMPLETELY BEFORE CLEANING:

To clean dust, wipe with a dry cloth or sponge.

To clean stainless steel parts, use alcohol or stainless steel cleaning products.

Make sure the Sliding Lid for the Signature Burner slides correctly and fully after cleaning and that any excess cleaning product has been wiped off completely.

KEEP HANDY A CLASS B FIRE EXTINGUISHER:

Class B fire extinguishers are used to put out fires that are caused by combustible liquids. Class B fire extinguishers quell the flames by expelling a dry chemical powder or foam with a nitrogen propellant. The specific chemical can vary depending on the make or model. Water will not extinguish this flame.

PROCEDURE IF BURNER IS OVERFILLED:

In case of accidental overfilling of the fuel tank, follow these steps...

- NEVER light the Signature Burner if it is filled past the **MAX filling line**, shown in the section of **Filling The Signature Burner**.
- Remove the Signature Burner from its housing, using the hooks on the back end of the *Sliding Lid Handle* or rubber gloves.
- Empty the excess fuel into a container, kitchen sink or toilet bowl.
- Wipe off all excess fuel that may have dripped on the outside of the Signature Burner during emptying and allow any residual fuel to evaporate.
- Place the Signature Burner back into its housing.
- Ignite the Signature Burner only once all residual fuel outside the burner has completely evaporated and the container used to fill the burner has been sealed and moved to a safe distance from the burner.

USE CORRECT FUEL - COMMERCIAL NAMES:

Australia, India, New Zealand, South Africa, Germany, United Kingdom, USA &

Canada, France: Bio-Ethanol - Denatured Alcohol, **Holland:** Spiritus - Brand Spiritus,

Italy: Alcool Denaturato - Spirito de Brucaire, **Japan:** Nen-ryo yoh, **Scandinavia:** T-Sprit -

Rod Sprit - Denaturoitu Sprii - Sinol - Marinol, **Spain:** Alcohol Metalico - Alcohol de

Quemar, **Switzerland:** Brennsprit, **Turkey:** Ispirto.




BEAUTY FIRES

Signature Burner Range


The following information is provided to assist in understanding how each model within our collection can be incorporated into your desired settings. It is intended as a guide only and it is important that you read the detailed *Model Specification* of the model you are interested in before ordering, specifying, installing or operating the fire.

Model No.	Dimensions in mm (L x W x H)	Fuel Capacity	Material	Heats On Average	Minimum Room Area	Thermal Output Net	Burning Time On Average	Consumption Average
BF001	320x320x128	5.2 ℓ	Brushed 304 SS	up to 125 m ³	50 m ³	4.0 kW/hr	4-8 hrs	0.5 ℓ/hr
BF002	614x244x128	7.7 ℓ	Brushed 304 SS	up to 200 m ³	70 m ³	6.5 kW/hr	6-10 hrs	0.75 ℓ/hr
BF003	914x244x128	11.5 ℓ	Brushed 304 SS	up to 275 m ³	90 m ³	10.5 kW/hr	8-12 hrs	0.9 ℓ/hr


*Average consumption and burn time is based on mixed settings of maximum and moderate output. These burn times and consumption rates may vary depending on room characteristics.

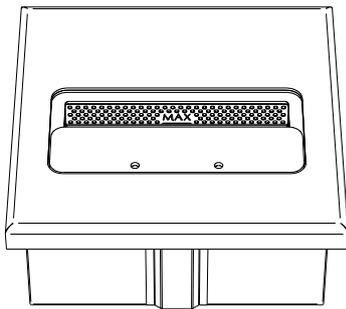


BF001 - Single Bio-Fuel Burner

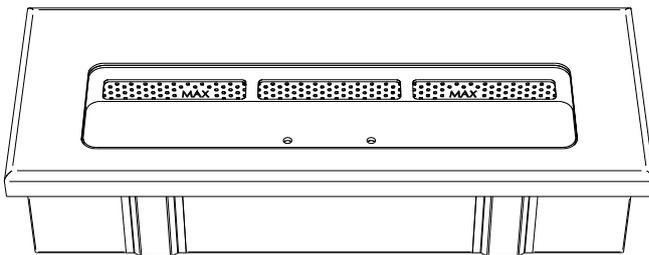


BF002 - Classic Bio-Fuel Burner

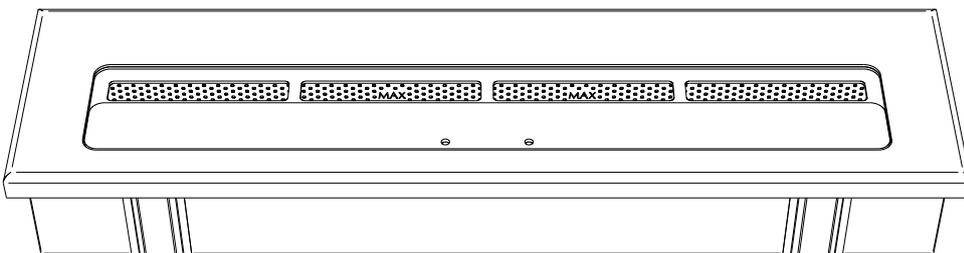


BF003 - Grand XL Bio-Fuel Burner

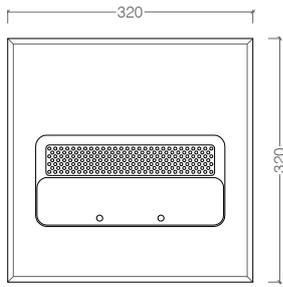

Top View - BF001 - Single Bio-Fuel Burner

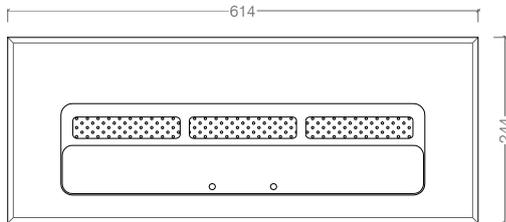

Top View - BF002 - Classic Bio-Fuel Burner

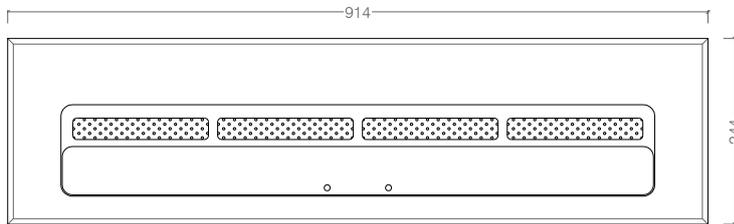


Top View - BF003 - Grand XL Bio-Fuel Burner

Please refer to Technical Specification Sheets for more detailed drawings and dimensions.

NOTE: There are many different variations available for installing the Burner Range. In all cases, the Burner must:

- Installed into non-combustible material ONLY;
- All gas connections or pipelines near your new Burner installation must be disconnected and made safe by an appropriately qualified professional prior to installation;
- Installed into a fixed, level and secure position before filling, lighting and operating;
- Installed in a position that limits relocation requirements to eliminate the risk of accidents caused by fuel spillage. These burners are not designed to be relocated frequently;
- Installed into a level platform;
- Not installed directly beside or near wallpaper, laminate, veneer or any surface that has not been fire rated;
- Installed into a setting that has a square back – the incorporation of angled backs alters the aerodynamics of the flame environment and could lead to an unstable flame behaviour;
- A minimum of 1000mm radius to any combustible material.
- Not be within the reach of any objects that are not fixed in position and can be moved by the wind or bumped over easily i.e. curtains, blankets, newspapers etc.

Installation & Safety Clearances

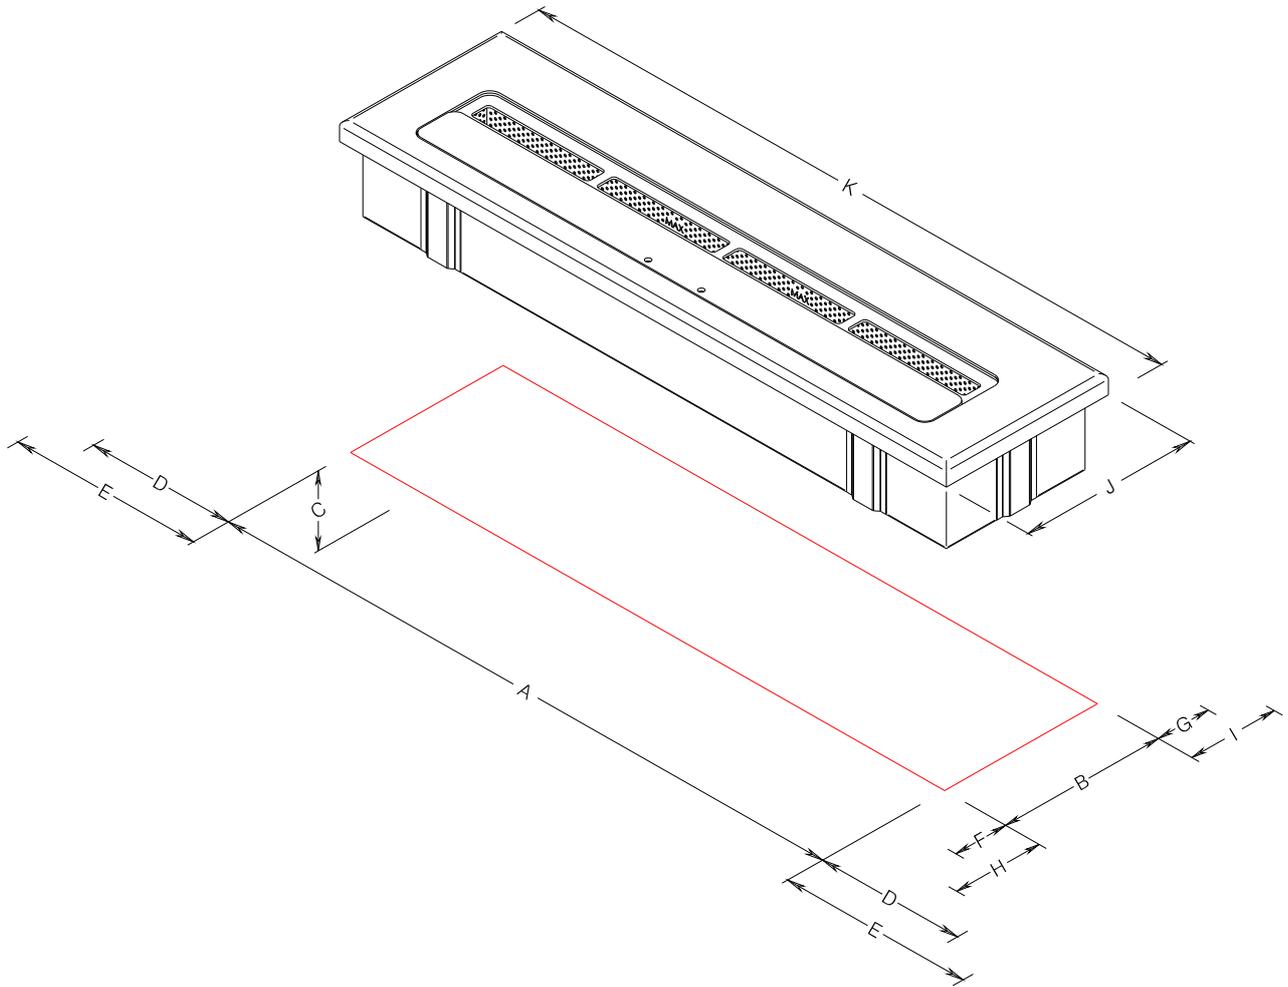

Cutout & Product Sizes


Model No.	Cut out Length - A	Cut out Width - B	Cut out Depth - C	Top Plate Length - K	Top Plate Width - J
BF001	306 mm	306 mm	105 mm	320 mm	320 mm
BF002	595 mm	230 mm	105 mm	614 mm	244 mm
BF003	895 mm	230 mm	105 mm	614 mm	244 mm

Safety Clearances

Model No.	Distance to Non-Combustible Items - D	(Front) Distance to Non-Combustible Items - F	(Back) Distance to Non-Combustible Items - G	Height Above Cutout to Non-Combustible Items	Distance to Combustible Items - E	(Front) Distance to Combustible Items - H	(Back) Distance to Combustible Items - I	Height Above Cutout to Combustible Items
BF001	55 mm	125 mm	125 mm	550 mm	1000 mm	1000 mm	1000 mm	1500 mm
BF002	55 mm	125 mm	125 mm	550 mm	1000 mm	1000 mm	1000 mm	1500 mm
BF003	55 mm	125 mm	125 mm	550 mm	1000 mm	1000 mm	1000 mm	1500 mm

NOTE: all clearances given are from the cut out and not the burner or the *Top Plate* of the burner.


1 - Filling the Signature Burner

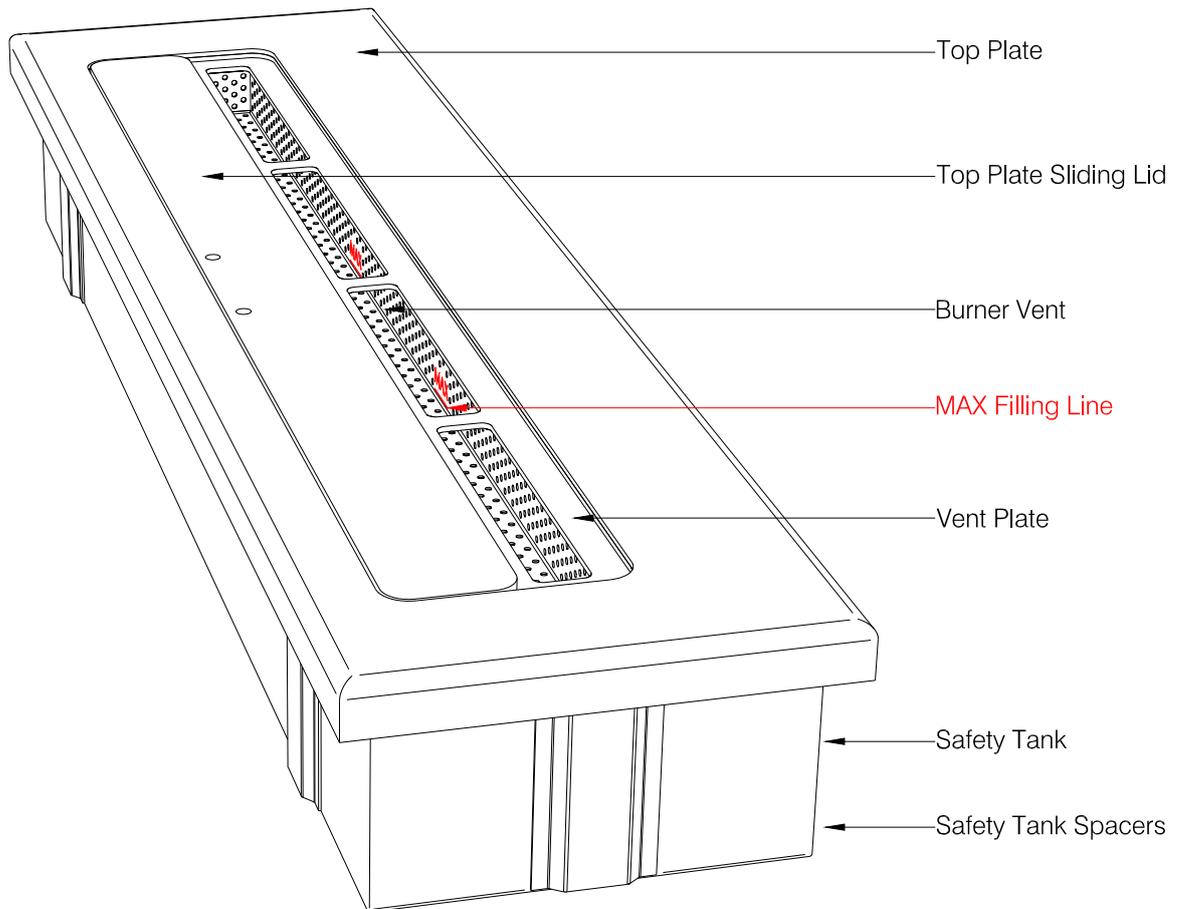


Fill the Signature Burner *Fuel Tank* to the *Fill Line* until the fuel becomes visible at the bottom of the *Burner Vent*. Fill using the *Fuel Pump* supplied or a funnel.

DO NOT OVERFILL.

Please wipe any spillage or excess fuel before proceeding to Step 2.

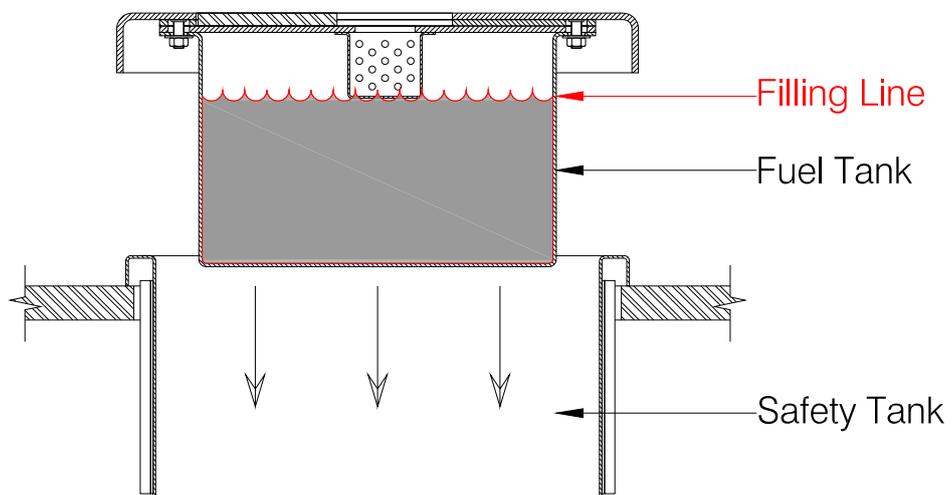


2 - Igniting the Signature Burner

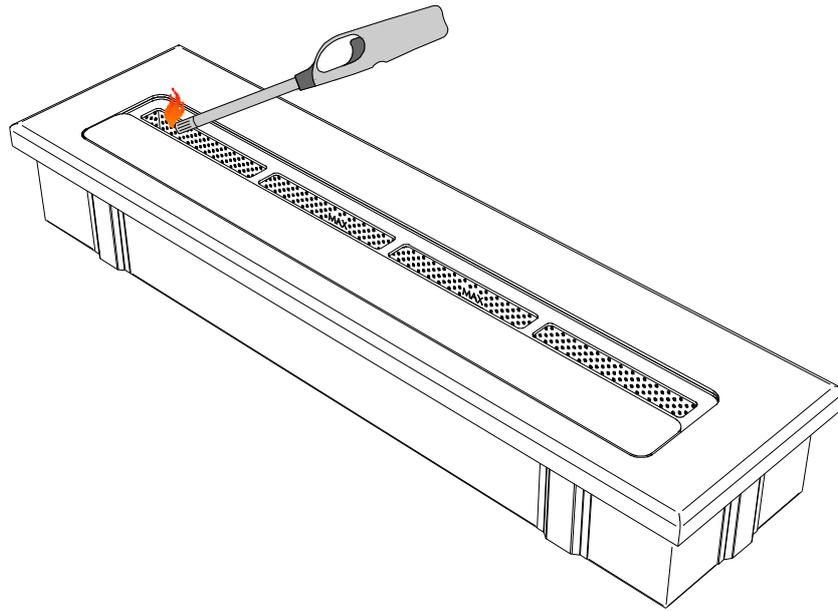


Seal the fuel canister used to fill the Burner and move to a safe distance away from the Burner. While standing at arm's length away from the Burner, use a long arm lighter as per the image above to introduce a flame to the openings in the *Vent Plate*. If the Burner has fuel in the reservoir but is not lighting, close the sliding lid for 5 minutes then open the sliding lid. Ensure there are no flames visible within the burner vent opening. Proceed to pour a small amount of fuel into the burner vent opening and ignite. This normally happens when the burner has been closed for a day or more.

3 - Adjusting the Flame Size

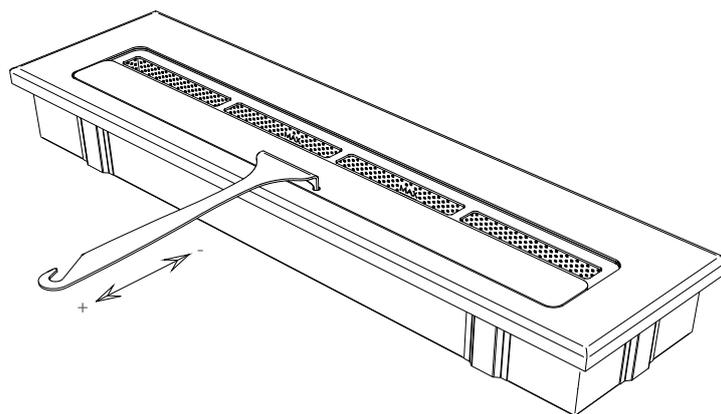

The flame intensity is adjusted by inserting the *Sliding Lid Handle's* tip into the corresponding holes in the *Top Plate Sliding Lid* as indicated above. Note the flame intensity takes a few minutes to change after an adjustment has been made.

4 - Extinguishing the Flame

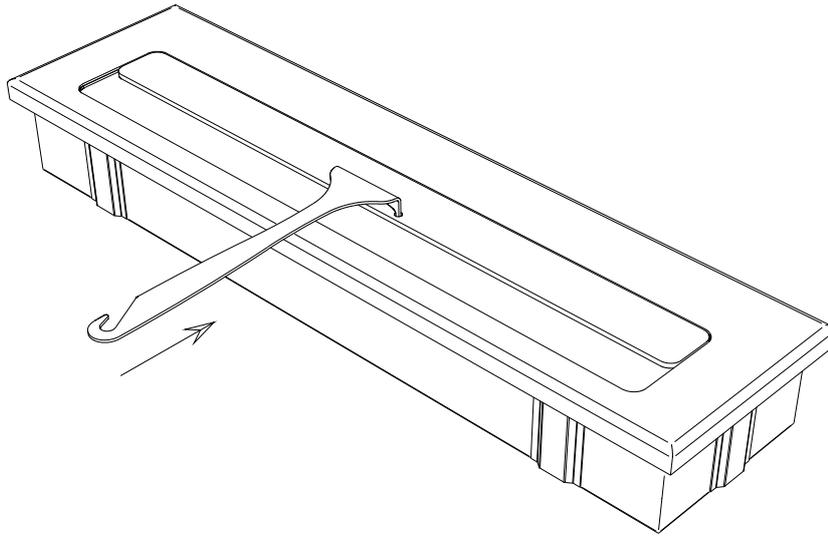

Using the *Sliding Lid Handle*, pull the *Sliding Lid* to the front / closed position. Should the flame not extinguish with the first try please repeat until extinguished. It should be a swift action coupled with downward pressure.

Cocoon Fires SA cc t/a Beauty Fires warranty Terms and Conditions:

1. All warranty claims are subject to manufacturer's review and acceptance.
2. Beauty Fires warrants that it uses reasonable care and skill to ensure that its design products are of reasonable quality. Beauty Fires will at its cost and in its sole discretion: (i) remedy any defect or fault in any product purchased; or (ii) replace any product in respect of which there is a defect or fault, during the warranty period, provided that written notice is given by the Purchaser to Beauty Fires of any such defect or fault in the product as soon as the Purchaser becomes aware of that fault or defect. All warranty claims must be returned to Beauty Fires for assessment with a receipt or other proof of payment. No warranty is given in respect of any glass contained in any product.
3. Beauty Fires has no liability to remedy any defect in a product or replace a product where the defect or fault is caused or contributed to by (i) the failure of the Purchaser to install the product according to specific installation instructions either supplied within each product box or carton or available on the Beauty Fires website or through the retailer or Beauty Fires representative; or (ii) use of the product in a manner or for a purpose for which it was not designed.
4. All site application or installation must reflect these procedures otherwise the product warranty will be considered void or will not take effect.
5. Except as provided for in this warranty, and to the extent allowed by law, Beauty Fires liability in respect of the product under the law of any State or Territory is excluded. Where liability may be limited but not excluded by any applicable State or Territory law, liability is limited to the full extent possible under that law.
6. This Clause 5 will only apply in Australia to the extent to which the provisions of the Commonwealth Trade Practices Act 1974 (the "Act") apply to contracts entered into by Beauty Fires for the provision of goods and services. In all other countries the local equivalent Trade Practices legislation shall apply and Beauty Fires exercises all of its rights to limit its liability to the full extent allowed. Pursuant to section 68A of the Act, this Clause 6 applies in respect of the goods or services supplied by Cocoon Fires Pty Ltd which are not of the kind ordinarily acquired for personal, domestic, or household use or consumption, provided that this Clause 6 will apply if the Purchaser establishes that reliance on it would not be fair and reasonable. Liability for a breach of a condition or warranty implied by the Act is limited to any one of the following, as determined by Cocoon Fires Pty Ltd in its sole discretion: (i) the replacement of the goods or the supply of equivalent goods; (ii) the repair of the goods; (iii) the payment of the cost of replacing the goods or acquiring equivalent goods; or (iv) the payment of the cost of having the goods repaired. In no event will Cocoon Fires Pty Ltd be liable to the Purchaser for any damages, including lost profits, lost savings or any other incidental or consequential damages arising out of the use or inability to use the product or any claim by any other party. All claims are limited to the repair or the replacement of the products only and do not include any labor or transportation charges. The entire risk as to the use and performance of the product is assumed by the Purchaser.

All products bearing the logo of Beauty Fires is covered by a 2 year warranty.

IMPORTANT:

- **Stone chipping, painting scratches and general scratches are not covered by the Warranty.**
- **Due to the characteristics of Stainless Steel, over time the finish will mature through natural processes associated with the use with heat and a flame.**
- **Is it recommended the Stainless Steel Components be polished annually with a non abrasive polish to bring & restore the finish and also to regularly clean the products from residue and dirt.**

For any further information please contact www.beautyfires.com

BEAUTY  FIRES

www.beautyfires.com